

Steps for Burning a CD on a Samsung SHR-2162

1. Make sure you have software version 2.16 if you have anything earlier than this you need an upgrade. You can check it by going into your menu, selecting system, and then system info and setup. Verify the software version.
2. Figure out the exact start and stop times and dates and cameras you wish to burn.
3. Insert a blank **CD-R** into the CD ROM.
4. Enter your menu and select Backup from it.
5. Enter your start and stop times and dates and deselect the cameras you don't need burned.
6. Highlight the Start button and hit Enter.
7. It will take several minutes for the machine to burn and finalize. When the process is complete the CD will automatically come out.
8. This CD will be able to be played on any PC with a CD ROM and Windows Media Player software

Samsung – 888-595-2288