

CAM SS Remote Can Connect to Server but No Video

You will need to perform these steps at the at the Vision Controls CAM Server.

1. Go into CAM SS software settings (SET)
2. Make sure the IP address of the DVR is listed in the addressbook tab
3. go into (LINK)
4. Link to it by double-clicking the connection
5. ensure **Automatically Reconnect** is checked in the CAM Server software.